

# HSV086

Series Safety Shut-off Valves for Efficient, Sustainable and Safe Gas Distribution Proven Technology. Superior Performance.



## HSV086 and HSVS086 Series Valves

Designed to offer overpressure and under pressure protection, the HSV086 series from (former Gorter brand) comprises safety shut-off valves for use in gas transmission systems, gas distribution networks and industrial gas pressure regulating systems. The HSV086 series is supported by global expertise and unmatched local support capabilities.

#### HSV086

HSV086 series consists of a number of effective safety shut-off valves for use in gas transmission systems, gas distribution networks and industrial gas pressure regulating systems.

The HSV086 has demonstrated its quality and usability for more than 25 years. The HSV086 has been improved and modified according to current technology.

The HSV086 series consists of two types of safety shut-off valves:

- HSV086, the standard model with nominal diameters of 1"-12"
- HSVS086, with a two-stage release mechanism in nominal diameters >16"

Both types offer overpressure and underpressure protection. The HSV086 and HSVS086 feature modular construction and are supplied with a standard control mechanism and sensing element. Both are suitable for operating pressures up to 100 bar. Nominal diameters up to 12" are available in pressure classes up to ANSI 2500.

#### HSVS086

In comparison with the standard model, the HSVS086 is equipped with a two-stage release mechanism and an extra valve bushing.

The two-stage release mechanism features the option of controlling greater capacities while maintaining accuracy by means of an extra reduction of disturbance forces on the control mechanism. Another advantage is the increase in the maximum closing member lift that uses the same standard control mechanism.

In addition, it is easier to commission and maintain because, in the closed position, the first stage can be activated independently from the second stage, thus making it possible to set the mechanism and carry out fine adjustments without activating the valve body assembly.









# Operation HSV086

The HSV086 safeguards against exceeding a maximum pressure and falling beneath a minimum pressure. The protection against underpressure serves also as a protection against a diaphragm rupture.

#### **Protection Against Overpressure**

When the pressure to be safeguarded (1) in the sensing element (3) exceeds the maximum value set with the springs (5) and (6), the diaphragm (2) is pushed downwards and turns the lever (8) around the pivot (9). The pin (7) is pushed upwards, turning the balance (10) to the right side around the pivot (11).

This results in the downward aimed switch pin (18) eventually stops being supported by the balance (10), causing the switch lever (16) to turn on its shaft.

This shaft (17) is the supporting point for the closing member with closing member stem (20). When the switch lever (16) has rotated a 90° turn, the closing member (20) closes due to the closing spring (19) located in the valve body.

In the closed position, the pressure behind the closing member will be reduced to the outlet pressure. The pressure difference between inlet and outlet pressure provides an additional closing force to the closing member (20). The safety device is now locked. The closing member will also remain shut even if the safeguarded pressure (1) drops below the maximum value.


#### **Protection Against Underpressure**

When the safeguarded pressure (1) in the sensing element (3) is lower than the trip value set with the spring (6), the diaphragm (2) shifts upwards.

Using its spring cup (4), the top part of the adjusting spring (5) comes to rest against the housing of the control mechanism and no longer against the diaphragm (2), causing the pressure for switching to be determined by the spring (6) alone.

The lever (8) will now push the pin (12) downwards, causing the balance (10) to rotate to the right, just as when maximum pressure is exceeded. The actions of the switch lever (16) and the closing member (20) are similar to those when maximum pressure is exceeded.

The closing member shuts in the same way in the event of a diaphragm rupture.

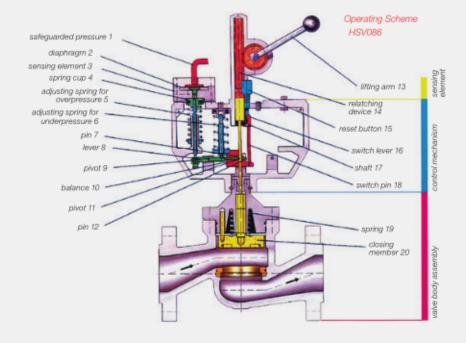




#### Unlocking

After correcting the failure or malfunction and a pressure equalization across the closing member (20), the mechanism can only be openend manually. This is accomplished by pushing down the lifting arm (13), turning it to the right and simultaneously pushing the reset button (15). After the mechanism has been opened, a spring pushes the lifting arm back into starting position and the relatching device (14) is disengaged.

The release operation for the first stage is identical to that of the HSV086. The difference is the release of a second stage. If the standard control mechanism (8) releases, the lever (10) will rotate to the right around the pivot (4). A rotation of approximately 15° causes the closing member stem (5) to no longer be supported by shaft (2), causing the closing member (6) to shut. The closing member and the closing member stem are pushed into the seat ring by gravity and by the closing spring (11).

Unlocking the second stage after correcting the failure or malfunction and the pressure equalisation across the closing member, occurs after unlocking the standard control mechanism (8). The valve (6) is easy to open, using the hand wheel (1).



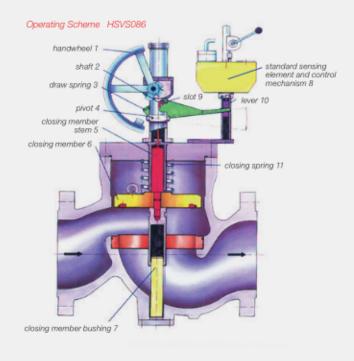



### **Technical Specifications**

General	
Type Indication	HSV086 (nominal sizes 1-12") HSVS086 (nominal sizes >16")
Pressure Class	ANSI 300 and ANSI 600 (**)
Maximum Pressure	50 bar ANSI 300, 100 bar ANSI 600
Operating Temperature	-20°C to +60°C (***)
Ambient Temperature	-30°C to +60°C (***)
Set Range for Overpressure	3-49.5 bar ANSI 300, 3-95 bar ANSI 600 (*)
Set Range for Underpressure	0.7-10 bar (*)

<sup>(\*)</sup> Higher set range for underpressure or overpressure protection upon request.

Flow Coefficient HSV086				
Nominal Size (inches/mm)	Cg Value			
1"/25	480			
2"/50	1,950			
3"/80	4,300			
4"/100	7,050			
6"/150	15,100			
81/200	26,060			
10"/250	40,800			
12"/300	60,050			

Accuracy Group	AG 1: 20-95 bar	
Overpressure Protection	AG 2.5: 3-21 bar	
Underpressure Protection	AG 5: 0.7-10 bar (*)	
DIN-DVGW Registered & CE N	Marked	

Classification Acc. DIN 3381/EN 14382

Flow coefficient HSVS086 upon request.

HSV086 M	HSV086 Measurements (mm) and Weights (kg)						
Nomir	nal Size	ANSI 300		ANSI 600		ANSI 300/600	
Inches	mm	L	Weight	L	Weight	н	
1"	26	203	30	216	30	555	
2"	50	267	45	292	45	615	
3"	80	318	60	356	65	655	
4"	100	356	105	432	115	665	
6"	150	445	195	559	210	715	
8"	200	559	295	660	320	867	
10"	250	662	455	787	490	995	
12"	300	711	600	838	660	960	

Measurements and weights for HSVS086 upon request.

<sup>(\*\*)</sup> Other pressure classes up to ANSI 2500 are available.
(\*\*\*) Other temperature ranges on request

<sup>(\*)</sup> Note: All pressures listed in table are overpressures.



Part	Material
Valve Body	A352-LCC(QT) or Equal • 1"/DN25: S355 or Equal
Bonnet Flange	S355 or A352 or Equal
Valve Plug	S355 or Equal
Valve Plug Stem	SS
Seat Ring	SS
Control Mechanism	SS
Diaphragm	NBR with Nylon Reinforcement
Dynamic O-rings	Viton
Static O-rings	NBR
Sensing Element	S355 or Equal

Special materials upon request.

### **Capacity Calculation**

The following formulas can be used to approximate pressure losses of the slam shut valve with the valve plug in open position.

Δp = Qn<sup>2</sup>. d.(Te + 273) (13,94,Cg)<sup>2</sup>.Pe

Δp = pressure loss in bar Qn = capacity in m<sub>n</sub><sup>3</sup>/h Pe = inlet pressure in bar

Cg = flow efficient

d = relative density (air=1)

Te = temperature of the gas at the inlet of the

safety valve

Ún = density of the gas in normal conditions

(with T=273 Kelvin)

For natural gas with  $\rho_n$ = 0.83 kg/m<sup>3</sup>

d = 0.643

For gasses other than natural gas

 $d = \rho_{s} gas/1.29$ 


Qmax ≤ K D1√Pe min

with D1 = nominal size (in mm)

Pe min = minimal inlet pressure in bar absolute

Qmax = maximum flow rate in m<sub>n</sub><sup>3</sup>/h

K = 100 for DN = 1" up to 6" K = 100 for DN = 8" up to 12"

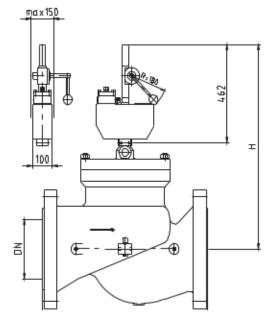

Dimensional sketch HSV086